

## How to Download Analyzer Software from the Internet

Testo strives to improve analyzer performance and operation and provide these improvements as a free download. These “**Download Instructions**” show you how to download and unzip the files into your computer.

Remember, if you have the testo 350 M/XL Emission Analyzer, you will need to download both the Control Unit and Analyzer Box instrument files




### NOTE:

If you already have the “**Flash Program**” on your computer just download the following files:


- testo Control Unit  
(Step 2 on the “**testo350 Instrument Software**” download page)
- testo 350 M/XL Analyzer Box  
(Step 3 on the “**testo350 Instrument Software**” download page)

## Download Process


So that the downloads can be easily located we recommend that you first create a unique folder (i.e. “**Download**”) on your local “C” drive before starting the download procedure.

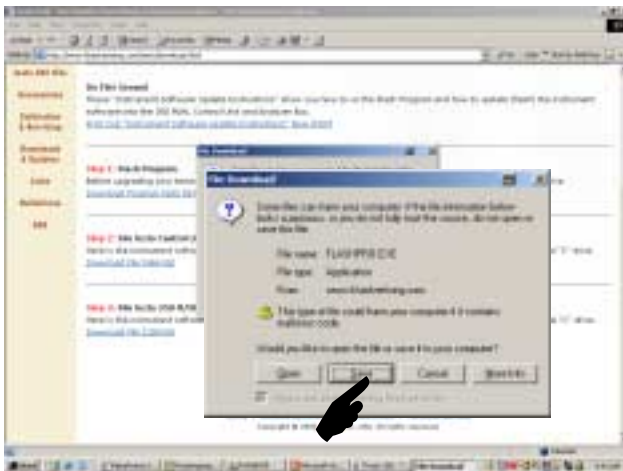

- Please go to “**Flash Program**” (Step 1 on the “**testo350 Instrument Software**” download page) and click on “**Download Program**” .
- A window appears and you are asked if you want to open or save the file. Please click on “**Save**” .

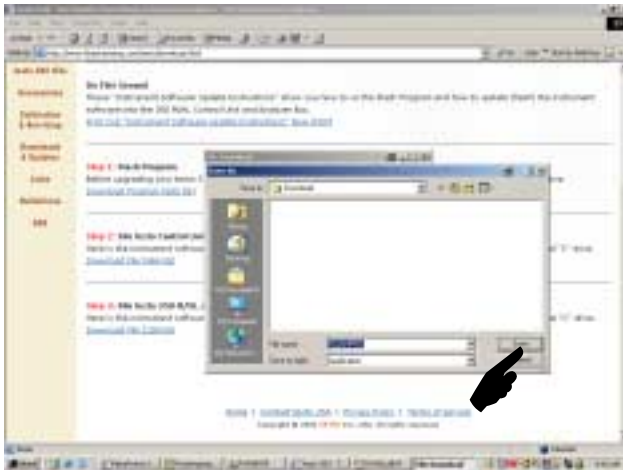

- You are then asked where you want to save the file.
- Please choose your new **“Save in”** location (i.e. **“Download”**) and click **“Save”**.

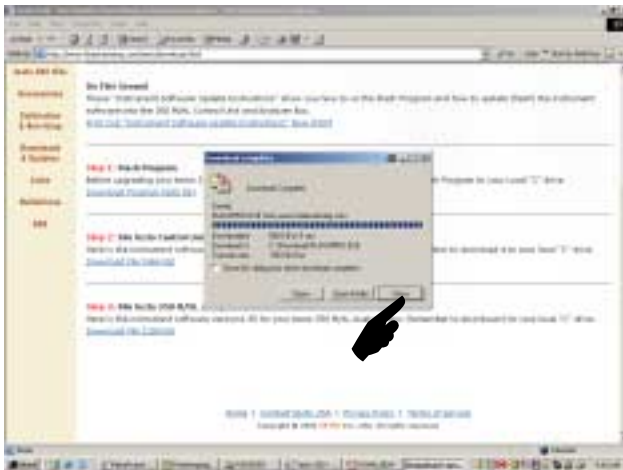

- The download starts automatically and takes approx. 1 minute to complete.
- After the download is finished the dialog box does not close automatically, please click **“Close”**.



**HINT:**


Now you can download the instrument files for the Control Unit and Analyzer Box (Step 2 and Step 3 on the **“testo350 Instrument Software”** download page) by clicking on **“Download File”**.

**Unzip Process**



When the downloads (Step 1 to Step 3) are completed, open your **“Windows Explorer”** and click on the folder (i.e. **“Download”**). Three files should appear: **“FLASHPRO”** for the Flash Program **“T350BT”** for the Control Unit **“T350MB”** for the Analyzer Box

Please **double-click** on **“FLASHPRO”**.

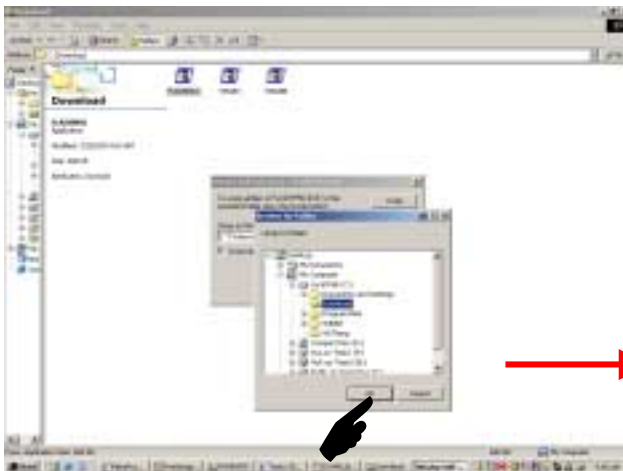

When the window **“Self Extractor”** appears use the **“Browse”** button and select your new created folder (i.e. **“Download”**) on your **“C”** drive.

Then click **“OK”** and click **“Unzip”** in the next window(s).



When extraction is completed, please click **“OK”**.



● Please click on “**Close**” to exit WinZip.



**NOTE:**

To unzip the instrument files from Step 2 and Step 3 follow the “**Unzip Process**” on page 3 again.



**Note:**

Now that the Flash Program and the files for the Control Unit and Analyzer Box have been downloaded you can now upgrade your analyzer.

For further instructions on how to use the Flash Update Program, please see the “**Instrument Software Update Instructions**” (point “Do This Second” on the “**testo350 Instrument Software**” download page).

● **Customer Service**

If you have any questions on how to perform any of these procedures contact us at:

**testo inc.**

Ironia Road

Flanders, NJ 07836

Phone: 800-227-0729 (Monday – Friday 8:00 am to 5:00 pm EST)